



GreenEdge Pro — 8-in-1 Cordless Garden Multi-Tool

Trim, edge, cut and clear with one tool



For more great products visit www.wellformdirect.co.uk

Any questions or problems call the Wellform Helpline on **0203 455 7783** or go to www.wellformdirect.co.uk

Thank you for purchasing the GreenEdge Pro. This cordless garden multi-tool has been designed to replace multiple bulky garden tools with one lightweight, versatile unit.



1) Safety Instructions

- General safety: PPE (gloves, goggles), keep children/pets away, only operate in dry conditions.
- Battery safety: do not submerge, short-circuit, or leave on charge unattended.
- Blade safety: always remove the battery before changing attachments.
- Do not use near flammable liquids or indoors.
- Store in a dry place.

2) Technical Specifications

- Motor Power: 800W
- Battery: 21V Li-ion, 1500 mAh (x1)
- Charging Time: 100–120 mins
- Run Time: 60–90 mins (depending on work conditions)
- No Load Speed: 10,000 rpm
- Load Speed: 7,000 rpm
- Cutting Diameter: 150 mm
- Charger Output: 0.3A
- Weight: 2.9kg
- Certifications: CE, UKCA, RoHS compliant

3) What's Included

- | | |
|------------------------------|---------------------------------|
| 1. Trimmer body | 10. Wrench x2 |
| 2. Li-ion battery (1500 mAh) | 11. Screwdriver + sleeve |
| 3. Charger (UK 3-pin plug) | 12. Screw |
| 4. Large debris shield | 13. Circular saw blades x3 |
| 5. Small debris shield | 14. One-line metal blades x2 |
| 6. Support handle | 15. Nylon blades x2 |
| 7. Pair of wheels | 16. Grass-cutting rope heads x2 |
| 8. Anti-collision frame | 17. Instruction manual |
| 9. Top cover | 18. Custom colour box |

4) Assembly Guide

1. Attach the large debris shield to the motor head.
2. Fit the anti-collision frame to the guard.
3. Attach the support handle to the shaft at a comfortable height.
4. Install the wheels if you wish to use guided edging.
5. Adjust shaft length and head angle.
6. Slide the charged battery into place until it clicks.



1



2



3



4



5



6

5) Changing Blades / Attachments

1. Remove the battery.
2. Use wrench to loosen the centre nut.
3. Fit the chosen blade (nylon, metal, rope, circular saw).
4. Replace washer/nut and tighten with wrench.
5. Re-fit guard, check blade spins freely.
6. Reattach battery before use.



1



2



3



4



5



6

6) When to Use Each Blade

1. Nylon blades – light grass trimming & edging.
2. Metal blades – dense weeds, thicker grass.
3. Circular saw blades – woody stems, brambles.
4. Rope cutters – delicate areas around flowerbeds.


1



2



3

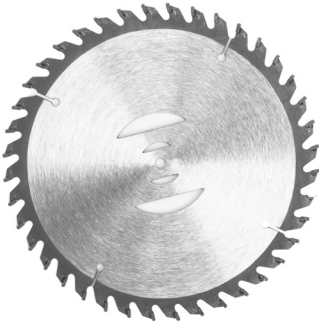

4



7) Using the Tool

- Hold with both hands (main handle + support handle).
- Use wheels for edging paths/lawns.
- Use smooth sweeping motions.
- Do not force the blade into material it isn't designed for.
- Always work with guard facing you.

8) Maintenance

1. Remove battery before cleaning.
2. Brush away debris after each use.
3. Wipe with damp cloth (no solvents).
4. Store tool and battery separately in a dry place.

9) Troubleshoot

Problem	Cause	Solution
Blade not spinning	Battery not fitted/ charged	Refit or recharge
Excess vibration	Loose blade or damaged head	Stop, check, tighten/ replace
Poor cutting	Wrong blade type or dull blade	Change to suitable head, replace
Short runtime	Battery not fully charged	Recharge fully

10) Warranty

- 12-month guarantee from purchase date (proof of purchase required).
- No separate warranty card needed.
- Covers manufacturing faults, excludes misuse/damage.
- **Customer service contact:** info@wellformdirect.co.uk | 0203 455 0498



Made in China

**Please read this manual carefully before use and
follow all maintenance instructions.**

Keep your warranty card safe.

Manufacturer reserves the right to modify
specifications for product improvement.

Code - H94342